

FH41-15S-0. 5SH(05) CL580-2221-0-05 20 4 14 9.5 7.5 10.57 11.95 12 11.7 10.5 24 - 11.5 11.8 10.5 9.2 29.4 2 FH41-20S-0. 5SH(05) CL580-2221-0-05 28 5 18 13.5 10 14.57 15.95 16 15.7 14.5 32 28.4 14.2 18.3 17 15.7 37.4 3 FH41-30S-0. 5SH(05) CL580-2218-5-05 30 6 19 14.5 12.5 15.57 16.95 17 16.7 15.5 32 28.4 14.2 19.3 18 16.7 37.4 3 FH41-31S-0. 5SH(05) CL580-2216-0-05 31 6 19.5 15 12.5 16.07 17.45 17.5 17.2 16 32 28.4 14.2 19.8 18.5 17.2 37.4 3 FH41-40S-0. 5SH(05) CL580-2216-0-05 31 6 19.5 15 12.5 16.07 17.45 17.5 17.2 16 32 28.4 14.2 19.8 18.5 17.2 37.4 3 FH41-40S-0. 5SH(05) CL580-2205-3-05 40 8 24 19.5 17.5 20.57 21.95 22 21.7 20.5 44 40.4 20.2 24.3 23 21.7 49.4 4 FH41-50S-0. 5SH(28) CL580-2204-0-28 50 10 29 24.5 22.5 25.57 26.95 27 26.7 25.5 44 40.4 20.2 29.3 28 26.7 49.4 4		DART NUMBER	NUMBER OF NUMBER OF NUMBER OF DIMENSION OF CONNECTOR, LAND PATTERN, METAL MASK AND FFC DIMENSION OF DRAWING FOR PACKING							NG											
FH41-20S-0.5SH(05) CL580-2221-0-05 20 4 14 9.5 7.5 10.57 11.95 12 11.7 10.5 24 - 11.5 14.3 13 11.7 29.4 2 FH41-28S-0.5SH(05) CL580-2208-1-05 28 5 18 13.5 10 14.57 15.95 16 15.7 14.5 32 28.4 14.2 18.3 17 15.7 37.4 3 FH41-30S-0.5SH(05) CL580-2218-5-05 30 6 19 14.5 12.5 15.57 16.95 17 16.7 15.5 32 28.4 14.2 19.3 18 16.7 37.4 3 FH41-31S-0.5SH(05) CL580-2216-0-05 31 6 19.5 15 12.5 16.07 17.45 17.5 17.2 16 32 28.4 14.2 19.8 18.5 17.2 37.4 3 FH41-40S-0.5SH(05) CL580-2205-3-05 40 8 24 19.5 17.5 20.57 21.95 22 21.7 20.5 44 40.4 20.2		PARI NUMBER	CODE NOWBER	CONTACTS	GROUND CONTACTS : g	C	D	E	F	Н	J	K	L	М	Р	Q	R	S	Ţ	Ų	V
FH41-28S-0. 5SH(05) CL580-2208-1-05 28 5 18 13. 5 10 14. 57 15. 95 16 15. 7 14. 5 32 28. 4 14. 2 18. 3 17 15. 7 37. 4 3 FH41-30S-0. 5SH(05) CL580-2218-5-05 30 6 19 14. 5 12. 5 15. 57 16. 95 17 16. 7 15. 5 32 28. 4 14. 2 19. 3 18 16. 7 37. 4 3 FH41-31S-0. 5SH(05) CL580-2216-0-05 31 6 19. 5 15 12. 5 16. 07 17. 45 17. 5 17. 2 16 32 28. 4 14. 2 19. 8 18. 5 17. 2 37. 4 3 FH41-40S-0. 5SH(05) CL580-2205-3-05 40 8 24 19. 5 17. 5 20. 57 21. 95 22 21. 7 20. 5 44 40. 4 20. 2 24. 3 23 21. 7 49. 4 4 FH41-50S-0. 5SH(28) CL580-2204-0-28 50 10 29 24. 5 22. 5 25. 57 26. 95 27 26. 7 25	FH4′	11-15S-0.5SH(05)	CL580-2222-2-05	15	3	11. 5	7	5	8. 07	9. 45	9. 5	9. 2	8	24	-	11. 5	11. 8	10. 5	9. 2	29. 4	25
FH41-30S-0. 5SH(05) CL580-2218-5-05 30 6 19 14. 5 12. 5 15. 57 16. 95 17 16. 7 15. 5 32 28. 4 14. 2 19. 3 18 16. 7 37. 4 3 FH41-31S-0. 5SH(05) CL580-2216-0-05 31 6 19. 5 15 12. 5 16. 07 17. 45 17. 5 17. 2 16 32 28. 4 14. 2 19. 8 18. 5 17. 2 37. 4 3 FH41-40S-0. 5SH(05) CL580-2205-3-05 40 8 24 19. 5 17. 5 20. 57 21. 95 22 21. 7 20. 5 44 40. 4 20. 2 24. 3 23 21. 7 49. 4 4 FH41-50S-0. 5SH(28) CL580-2204-0-28 50 10 29 24. 5 22. 5 25. 57 26. 95 27 26. 7 25. 5 44 40. 4 20. 2 29. 3 28 26. 7 49. 4 4 FH41-68S-0. 5SH(28) CL580-2202-5-28 68 13 38 33. 5 30 34. 57 35. 95 36 35. 7 3	FH4	11-20S-0.5SH(05)	CL580-2221-0-05	20	4	14	9. 5	7.5	10. 57	11. 95	12	11.7	10.5	24	-	11. 5	14. 3	13	11.7	29. 4	25
FH41-31S-0. 5SH(05) CL580-2216-0-05 31 6 19. 5 15 12. 5 16. 07 17. 45 17. 2 16 32 28. 4 14. 2 19. 8 18. 5 17. 2 37. 4 32 FH41-40S-0. 5SH(05) CL580-2205-3-05 40 8 24 19. 5 17. 5 20. 57 21. 95 22 21. 7 20. 5 44 40. 4 20. 2 24. 3 23 21. 7 49. 4 4 FH41-50S-0. 5SH(28) CL580-2204-0-28 50 10 29 24. 5 22. 5 25. 57 26. 95 27 26. 7 25. 5 44 40. 4 20. 2 29. 3 28 26. 7 49. 4 4 FH41-68S-0. 5SH(28) CL580-2202-5-28 68 13 38 33. 5 30 34. 57 35. 95 36 35. 7 34. 5 56 52. 4 26. 2 38. 3 37 35. 7 61. 4 57	FH4	11-28S-0.5SH(05)	CL580-2208-1-05	28	5	18	13. 5	10	14. 57	15. 95	16	15.7	14. 5	32	28. 4	14. 2	18. 3	17	15.7	37. 4	33
FH41-40S-0.5SH(05) CL580-2205-3-05 40 8 24 19.5 17.5 20.57 21.95 22 21.7 20.5 44 40.4 20.2 24.3 23 21.7 49.4 4 FH41-50S-0.5SH(28) CL580-2204-0-28 50 10 29 24.5 22.5 25.57 26.95 27 26.7 25.5 44 40.4 20.2 29.3 28 26.7 49.4 4 FH41-68S-0.5SH(28) CL580-2202-5-28 68 13 38 33.5 30 34.57 35.95 36 35.7 34.5 56 52.4 26.2 38.3 37 35.7 61.4 57	FH4	11-30S-0.5SH(05)	CL580-2218-5-05	30	6	19	14. 5	12.5	15. 57	16. 95	17	16.7	15.5	32	28. 4	14. 2	19. 3	18	16.7	37. 4	33
FH41-50S-0.5SH(28) CL580-2204-0-28 50 10 29 24.5 22.5 25.57 26.95 27 26.7 25.5 44 40.4 20.2 29.3 28 26.7 49.4 4 FH41-68S-0.5SH(28) CL580-2202-5-28 68 13 38 33.5 30 34.57 35.95 36 35.7 34.5 56 52.4 26.2 38.3 37 35.7 61.4 57	FH4	11-31S-0.5SH(05)	CL580-2216-0-05	31	6	_	15	12.5	16.07	17. 45	17.5	17. 2	16	32	28. 4	14. 2	19.8	18. 5	17. 2	37. 4	33
FH41-68S-0. 5SH(28) CL580-2202-5-28 68 13 38 33. 5 30 34. 57 35. 95 36 35. 7 34. 5 56 52. 4 26. 2 38. 3 37 35. 7 61. 4 5	FH4	11-40S-0.5SH(05)	CL580-2205-3-05	40	8	24	19.5	17.5	20. 57	21. 95	22	21.7	20.5	44	40. 4	20. 2	24. 3	23	21.7	49. 4	45
	FH4′	11-50S-0.5SH(28)	CL580-2204-0-28	50	10	29	24. 5	22. 5	25. 57	26. 95	27	26.7	25. 5	44	40. 4	20. 2	29. 3	28	26.7	49. 4	45
THE SPECIFICATION OF (28) IS APPLIED TO NUMBER OF CONTACTS 50 AND 68.	FH4	11-68S-0.5SH(28)	CL580-2202-5-28	68	13	38	33. 5	30	34. 57	35. 95	36	35. 7	34. 5	56	52. 4	26. 2	38. 3	37	35. 7	61.4	5
	10	>THE SPECIFICATI	ON OF (28) IS APP	LIED TO NUM	IBER OF CONTACTS 50 A	AND 68.		* (5 '	^(٢	5								
	<u>\</u> 10	>THE SPECIFICATI	ON OF (28) IS APP	LIED TO NUM	IBER OF CONTACTS 50 A	AND 68.		* (\(\frac{1}{2}\)	^(٢,	٢								
	10	>THE SPECIFICATI	ON OF (28) IS APP	LIED TO NUM	IBER OF CONTACTS 50 A	AND 68.		* (\(\frac{1}{2}\)				2				` //.				
·VCA	10	>THE SPECIFICATI	ON OF (28) IS APP	LIED TO NUM	IBER OF CONTACTS 50 A	NND 68.		*(\(\frac{1}{2}\)				الم					(C)			
· VC	10	>THE SPECIFICATI	ON OF (28) IS APP	LIED TO NUM	IBER OF CONTACTS 50 A	NND 68.		*(\(\frac{1}{2}\)				الم				1	(C ₂			

PART NO.
CODE NO. EDC3-325208-00 FH41-**S-0.5SH(05) 4 6 CL580

FORM HC0011-5-8 1 4 This connector requires delicate and careful handling. Read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value.

I INSTRUCTIONS FOR MOUNTING ON THE BOARD I

◆Warp of Board

Minimize warp of the board as much as possible. Lead co-planarity is 0.1 mm or less. Too much warp of the board may result in a soldering failure.

◆load to Connector

Do not add 1N or greater external force when unreel or pick and place the connector etc. or it may get broken.

In addition, do not insert the FFC or operate the connector before mounting it.

[INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR]

◆Loard to Board


- Splitting a large board into several pieces
- Screwing the board

 
Avoid the handling described above so that no force is exerted on the board during the assembly process. Otherwise, the connector may become defective.

◆Amount of Warp

The warp of a 100 mm wide board should be 1 mm or less.

The warp of board suffers stress on connector and the connector may become defective.

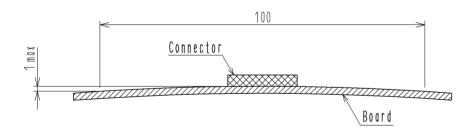




[INSTRUCTIONS ON INSERTING FFC AND CONNECTION]

♦ Use of the Actuator


- 1. Be very careful not to apply excessive force when releasing the actuator in the initial position.
 - If you use your nail or finger as shown below, the terminals may be deformed.

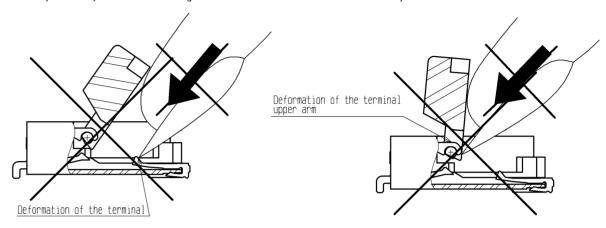


- 2. The actuator rotates around the rotational axis as shown below. Rotate the actuator.
- 3. The actuator will not open more than 110°.


 Do not apply any force backward beyond this point.


 Otherwise, the actuator may come off or break.

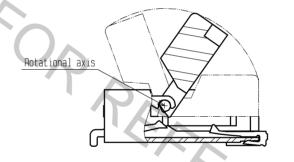

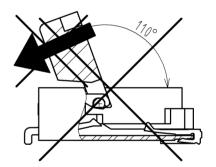

- 4. Move the actuator at approximately the center.
- 5. Do not pinch or pick the actuator to lift it as shown below. Otherwise, it may break. (Do not carry out any operation other than rotating the actuator as shown in 2 above.)

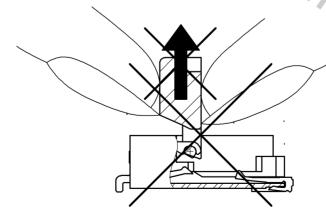

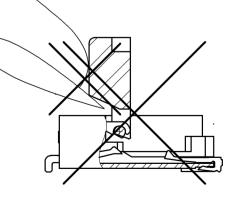

<INSTRUCTION MANUAL(1)>

Γ	HRS	DRAWING NO.	EDC3-325208-00		
l		PART NO.	FH41-**S-0.5SH(0	5)	
		CODE NO.	CL580	4	5/6
		7	0		

FORM HC0011-5-8 1 2 3 4 5


FORM HC0011-5-8

♦ Direction of Contacts

This connector has contacts on the bottom. Thus, insert FFC with the exposed conductors face down.

♦ Inserting the FFC

1. Insert the FFC by about 8.5 degrees along the surface and at a right angle to the connector. Insert it properly to the very end.

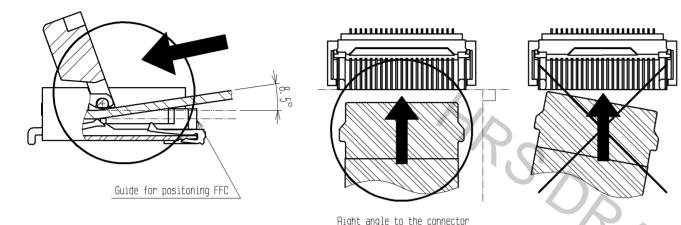


2. Do not insert the FFC diagonally from above.


If the FFC is inserted at a slant (incorrectly) as shown below in the FFC insertion process, the edge of the FFC may catch in the terminals, resulting in deformation of the terminals. The FFC may bend and patterns may break or the FFC may not insert completely, resulting in improper conduction.

*Keep a sufficient FFC insertion space in the stage of the layout in order to avoid incorrect FFC insertion.
Besides, it is not difficult to insert FFC correctly all the way to the end.
Design the proper layout of parts.

* Make adjustments with the FFC manufacturer for FFC bending perfomance and wire breakage.

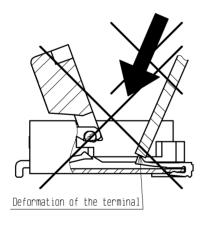

3. Do not rotate the actuator when FFC TAB is on right and left guides for positioning FFC. Make sure the position of FFC TAB and guides before rotate the actuator.

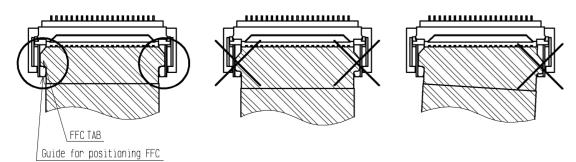

♦ Checking the Locking Condition


In the locked condition, make sure that the actuator is horizontal on the board surface. Do not apply excessive force to it near the 0° position of the actuator. Otherwise, the terminals may be deformed.

[INSTRUCTIONS ON FFC LAYOUT AFTER CONNECTION]

♦ Load to FFC


Be very careful not to apply any force to the connector directly after inserting FFC. Otherwise, the connector may become unlocked or the FFC may break. In particular, design the FFC layout with care not to bend it sharply upward in a vertial direction near the insertion opening.

Fix the FFC when loads are applied to it continuously.

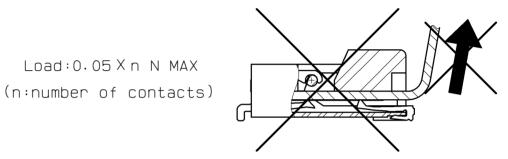

INSTRUCTIONS ON REMOVING FFC!

- ♦ Move the actuator at approximately the center.
- ♦ Release the actuator to remove the FFC. Remove the FFC by about 8.5 degrees along the surface.

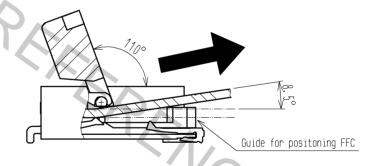

IOTHER INSTRUCTIONS

♦ Instructions on Manual Soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform reflow soldering or manual soldering with the FFC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not use excessive solder (or flux).

If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator. Supplying excessive solder to the reinforcing bracket may hinder actuator rotation, resulting in breakage of the connector.

<INSTRUCTION MANUAL(2)>

		DRAWING NO.	EDC3-325208-00		
]	H 75	PART NO.	FH41-**S-0.5SH(0)	5)	
		CODE NO.	CL580	4	6/6
			•		

2 3 4 5