


## DF57 Series Mating / Unmating Operation Instruction (For DF57 series)

## Mating

①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion. Slightly press the socket down at cable side to tilted angle. ©Press down at the lever side with stabilizing the cable side to insert. Mating completes.

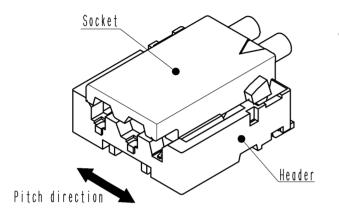


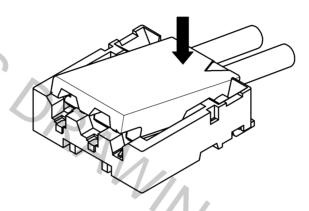

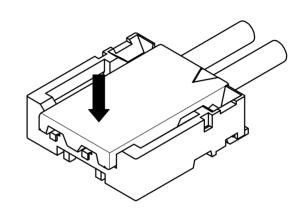


## Unmating


⊕Hook the lever with finger nail.

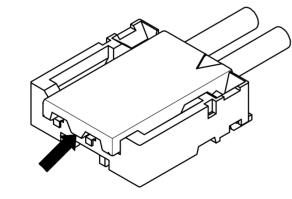

②Lift up to the upper difrection and friction lock is released.

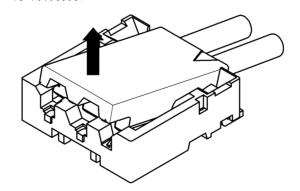

©Lift up to the upper direction and positive lock is released. Removal completes.

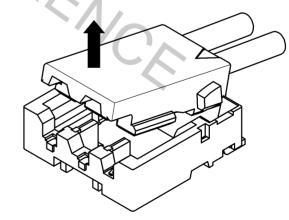

жs	DRAWING NO.	EDC3-343903-01		
	PART NO.	DF57H-6S-1.2C		
	CODE NO.	CL666-0103-4-00	$\triangle$	2/2

M HC0011-5-8\_AN 1 2 3 4 5