
## DF57 Series Mating / Unmating Operation Instruction


## Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

©Slightly press the socket down at cable side to tilted angle.

©Press down at the lever side with stabilizing the cable side to insert. Mating completes.

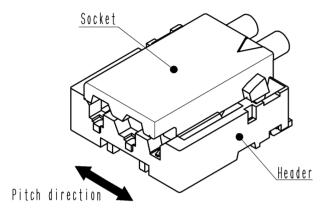


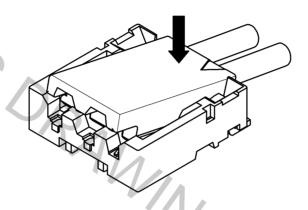

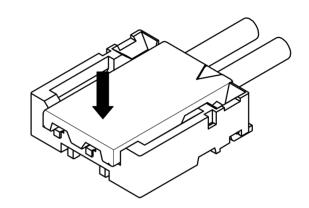


## Unmating


⊕Hook the lever with finger nail.

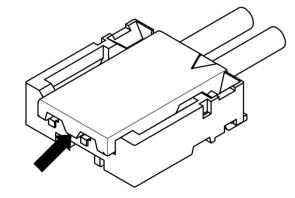

②Lift up to the upper difrection and friction lock is released.

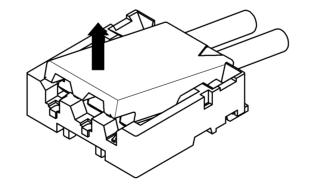

Slift up to the upper direction and positive lock is released. Removal completes.

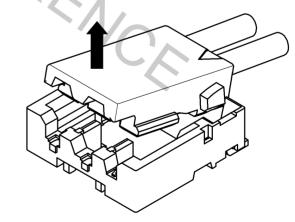

HS.	DRAWING NO.	EDC3-343900-00	
	PART NO.	DF57H-2S-1.2C	
	CODE NO.	CL666-0100-6-00	$\triangle$ $\frac{2}{2}$
		0	

M HC0011-5-8\_AN 1 2 3 4 5