

To measure temperature with this unit follow these simple instructions:

Select either the Fahrenheit or Celsius mode:

- With the unit "oFF" press and continue to hold the ON/OFF button. The LCD will alternate between °F and °C.
- Release the ON/OFF button when desired measurement mode appears on the LCD.

Remove the protective sheath from the stem.

Press the ON/OFF button.

Insert stem into area or object to be tested. At least 1/2" of the stem must be inserted.

**WARNING:** The stem is a sharp and pointed object which can be dangerous.


The Data Hold function is used by pressing the D-H button when taking a measurement. The measurement will flash on the LCD when Data Hold is in use. To return to normal function, press and release the D-H button a second time.

Press the ON/OFF button to end operation, or the unit will automatically power off after 35 minutes.

## To reverse the LCD to suit your viewing angle:

Insert a small coin into notch in curved area "B", then gently pry portion "A" from "B".
Shielded wires will keep the two parts connected.

Twist the area "A" 180° and snap back into area "B".

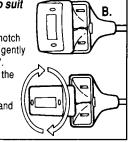

## Specifications:

Range	58° to 300°F/-50° to 150°C
Resolution	0.1°F/C
Accuracy	±2°F/±1°C
Sampling Time	
Battery	

## THIS INSTRUMENT

is in compliance with EN 50 081-1:1992, EN 50 082-1:1992, IEC 801-2:1984, IEC 801-3:1984, IEC 801-4:1988.

Test Products International, Inc. Beaverton, OR 97005

503-520-9197 Fax: 503-520-1225 tpiusa@msn.com

MADE IN KOREA

